


03

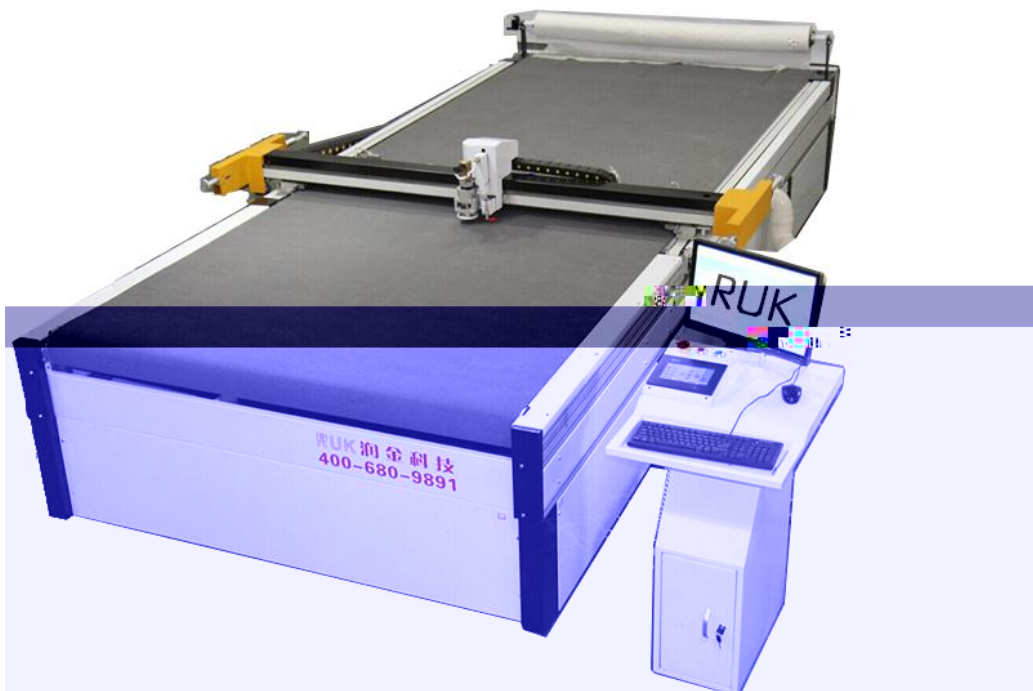

86-0574-28812912

-
-
-
-
-

.....


.....


.....


.....



.....


.....2


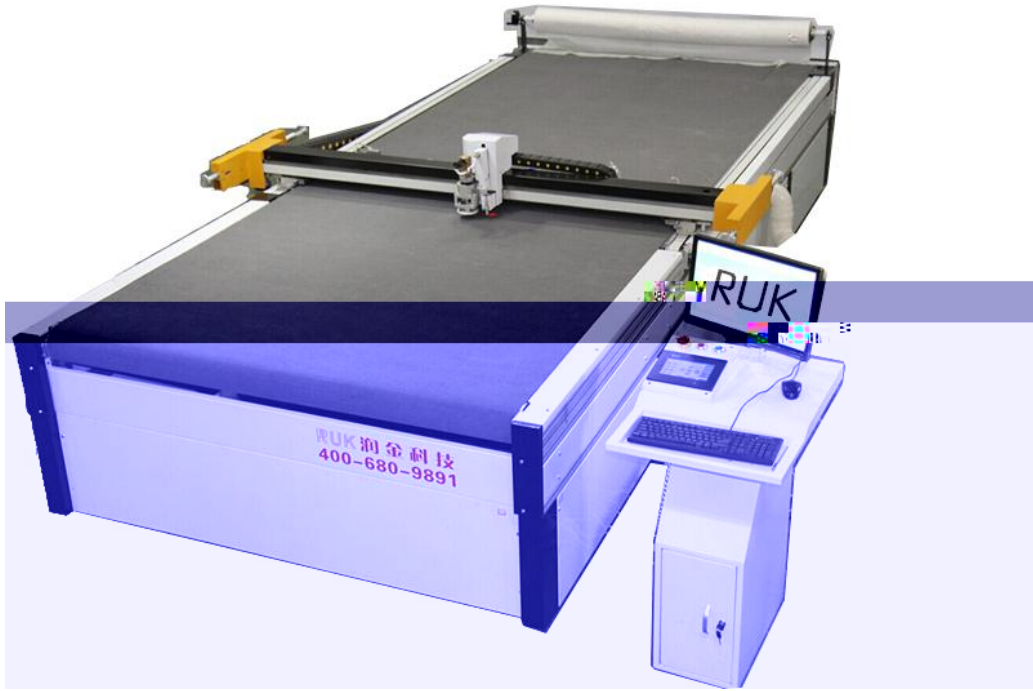



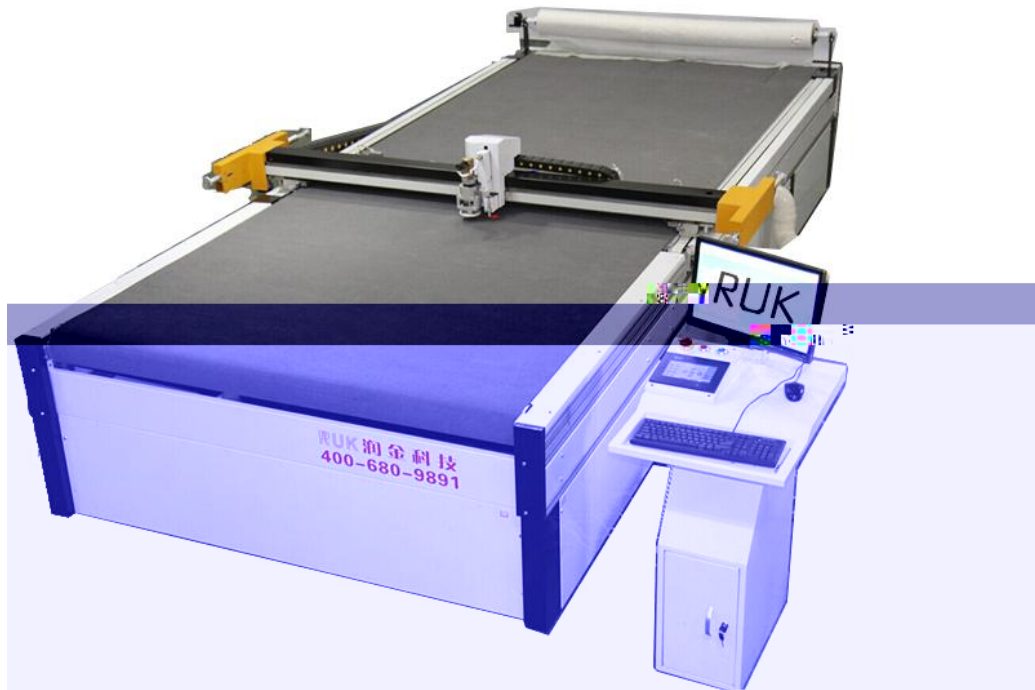


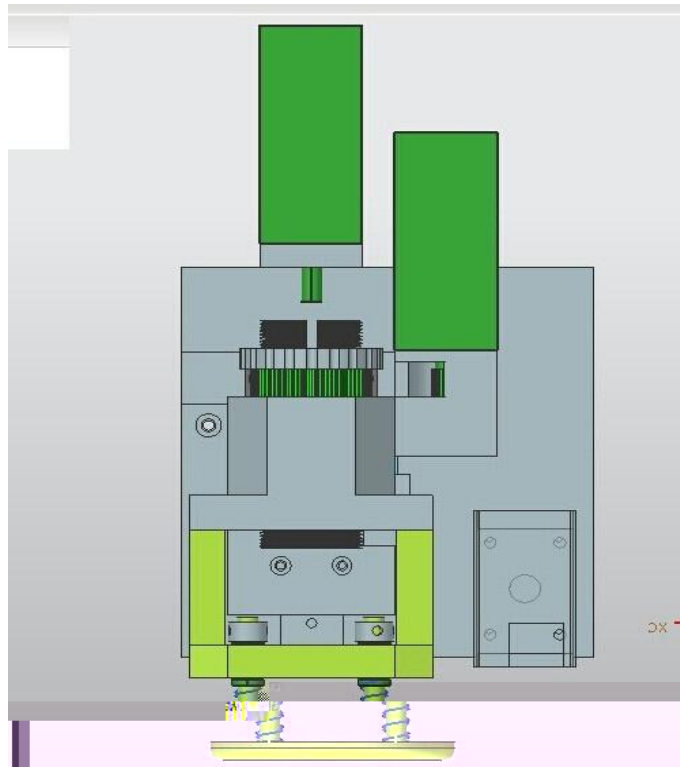

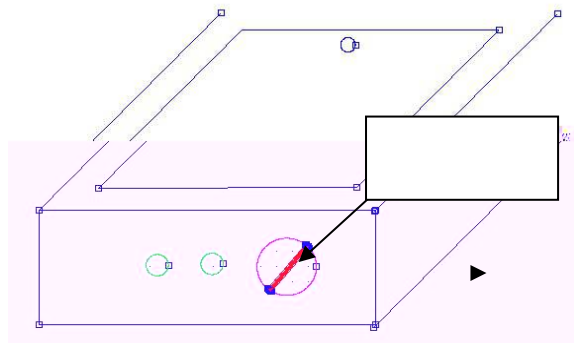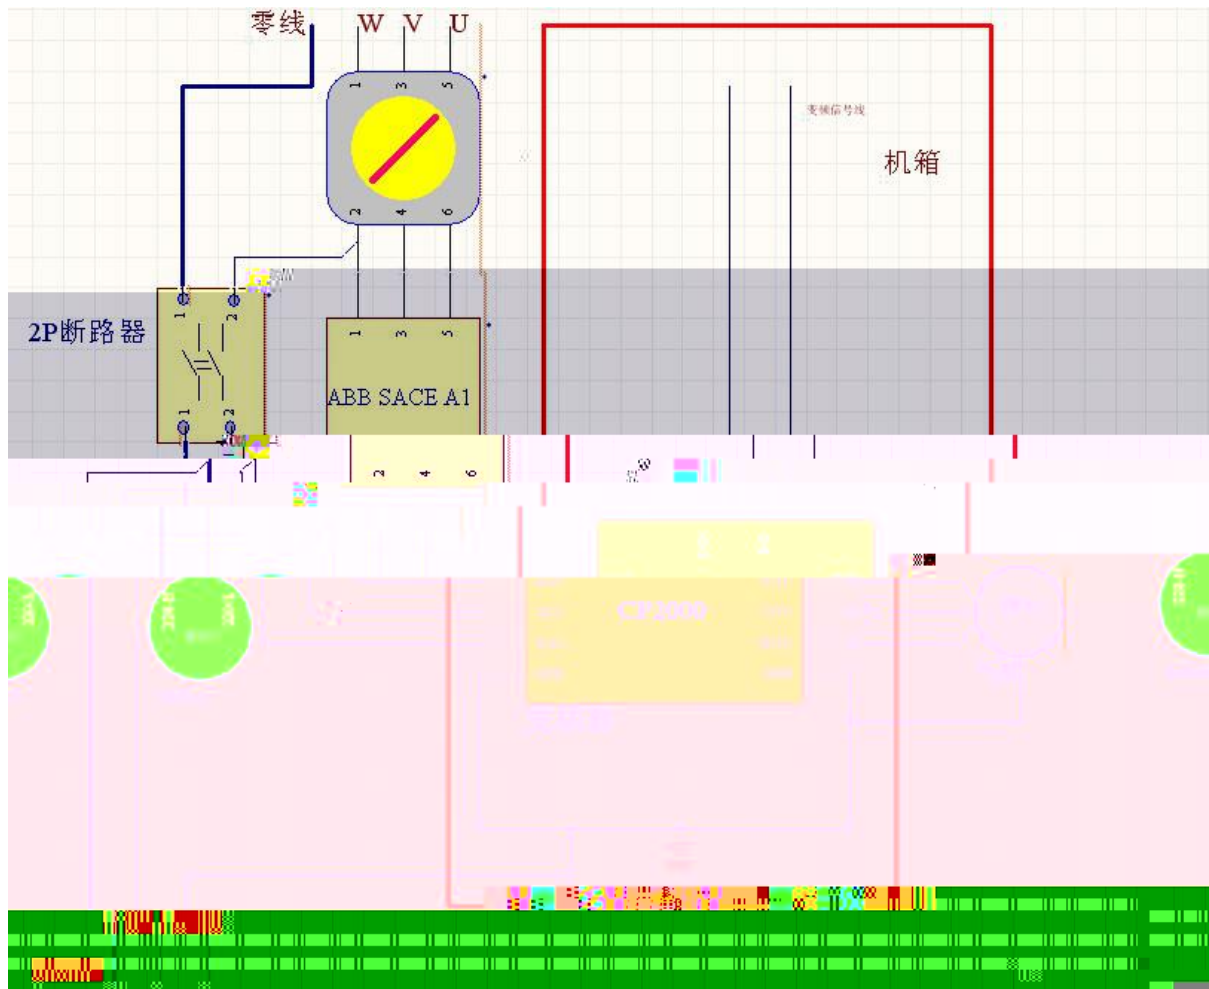

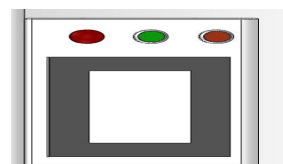

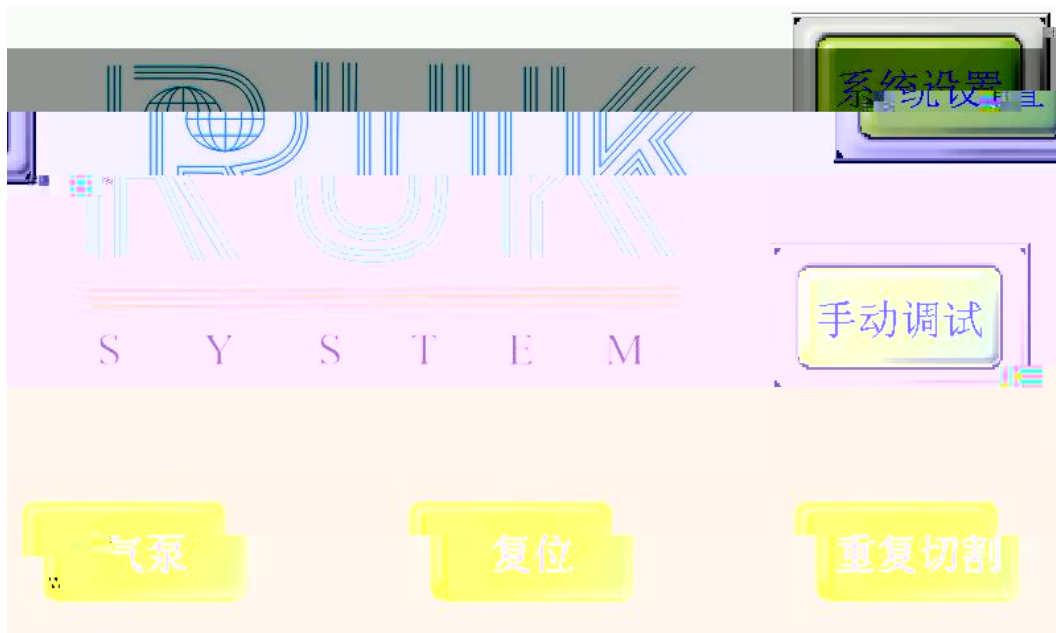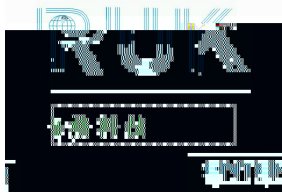

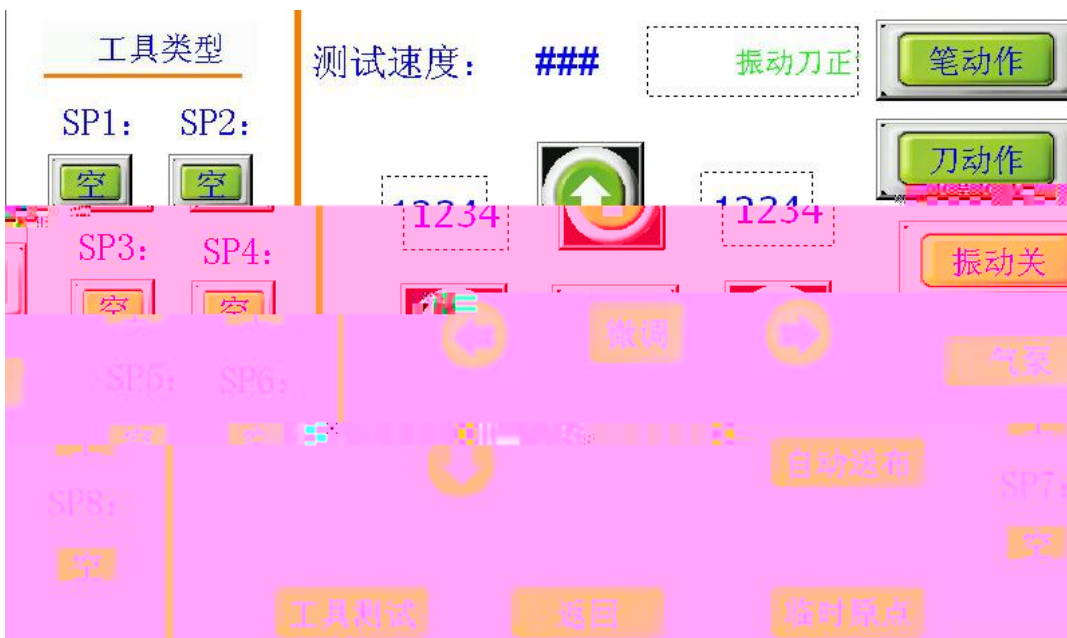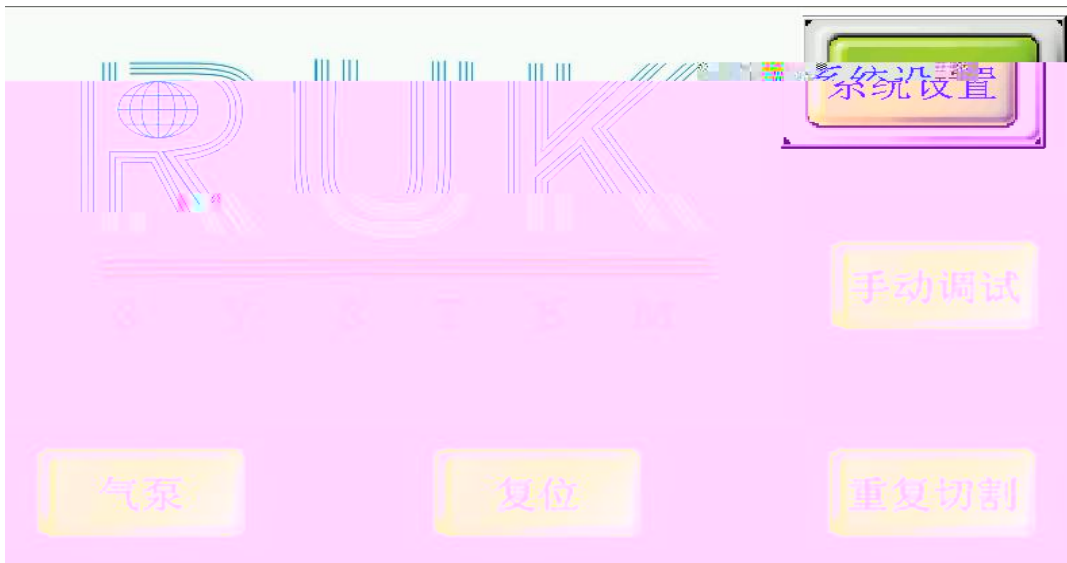

自动送布

自动滚动:

关

滚动放气:

关

夹皮带

滚动吸风:

关

测试速度:

###

送料

滚动速度:

####

1224

1224

滚动加速度:

####

送料偏移量:

##.#

吸风延时:

##


微调

返回



笔速: <input type="text" value="###.##"/>	拾笔延迟: <input type="text" value="###"/>	刀Y轴偏移: <input type="text" value="###.##"/>
笔加速: <input type="text" value="####"/>	下刀延迟: <input type="text" value="###"/>	旋转刀角度补偿: <input type="text" value=""/>
刀速: <input type="text" value="###.##"/>	拾刀延迟: <input type="text" value="###"/>	旋转刀过冲补偿前: <input type="text" value=""/>
刀加速: <input type="text" value="####"/>	空速: <input type="text" value="####"/>	毛X轴偏移: <input type="text" value="###.##"/>
<input type="text" value="###.##"/>	空加速: <input type="text" value="####"/>	毛Y轴偏移: <input type="text" value="###.##"/>
<input type="text" value="###.##"/>	X校正: <input type="text" value="####"/>	<input type="text" value=""/>
<input type="text" value="###.##"/>	Y校正: <input type="text" value="####"/>	<input type="text" value=""/>
<input type="text" value="###.##"/>	<input type="text" value=""/>	<input type="text" value=""/>

返回

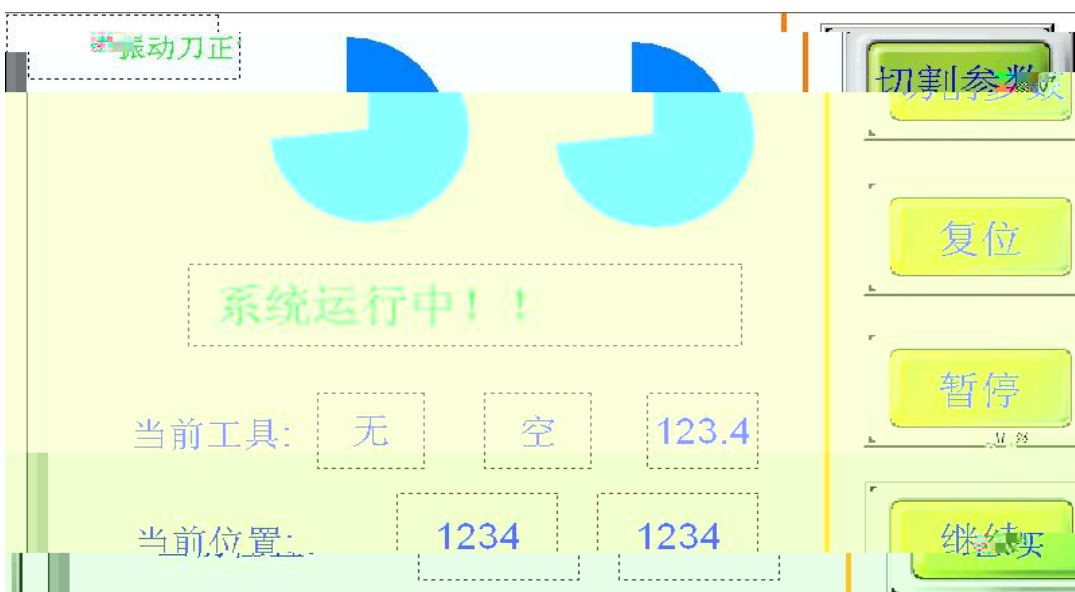

切割参数

笔速: #####

中间深度: ###.#

笔加速: "#####

全刀深度: ###.#

刀速: #####


半刀深度: ###.#

刀加速: #####

空速: #####

空加速: #####

返回

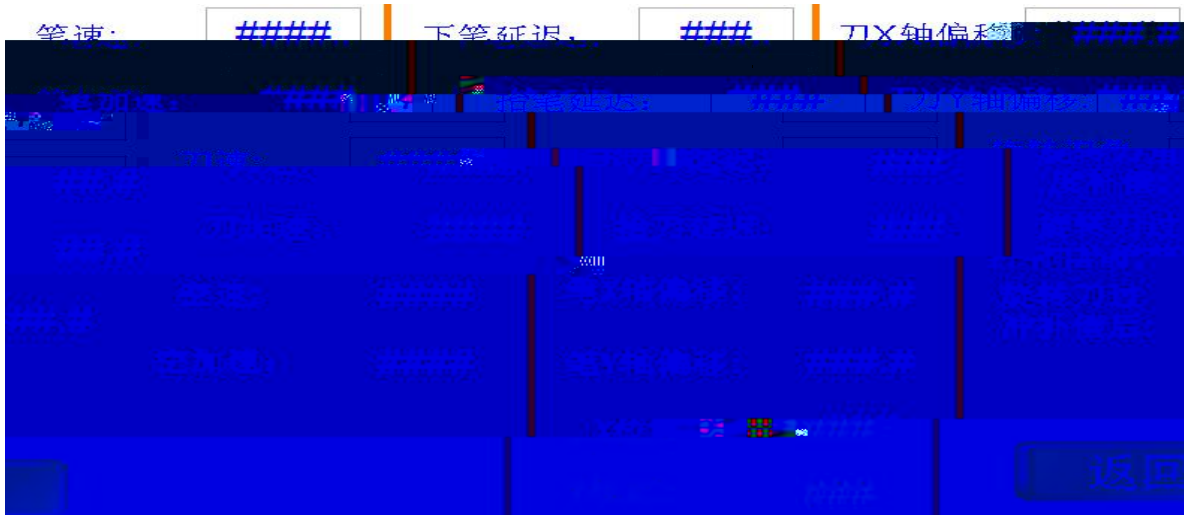

功能设置


自动重复:

关

虚线切割:

###

关

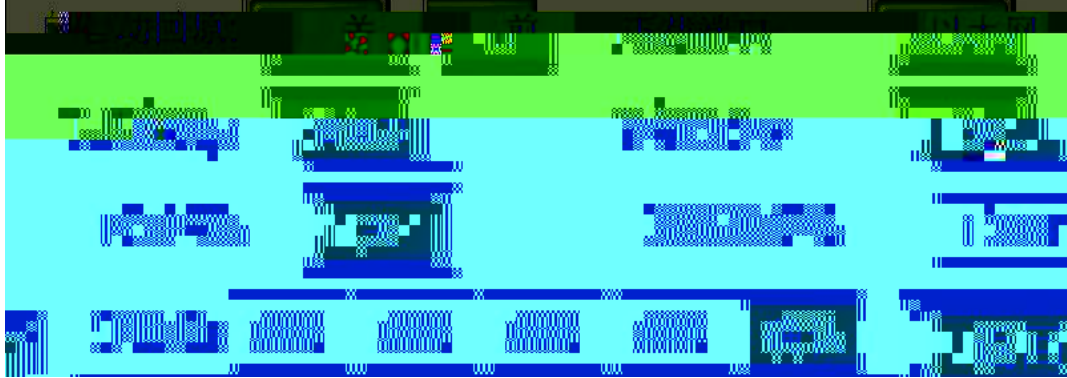

工具类型

测试速度:

###

振动刀正

笔动作

SP1: SP2:

空

空

1234



1234

刀动作

SP3: SP4:

空

空

1234



1234

振动关

SP5: SP6:

空

空

1234



1234

1234

气泵

SP8:

空

1234



1234

1234

SP7:

空

工具测试

返回

临时原点

自动送布

程序已过期，请联系厂家。



控制器编号:

剩余天数:

请输入密码:

返回

